



MARSHALL-TUFFLEX

Pre-Wired Power Grommet

INSTALLATION INSTRUCTIONS



UK OWNED
UK MANUFACTURER

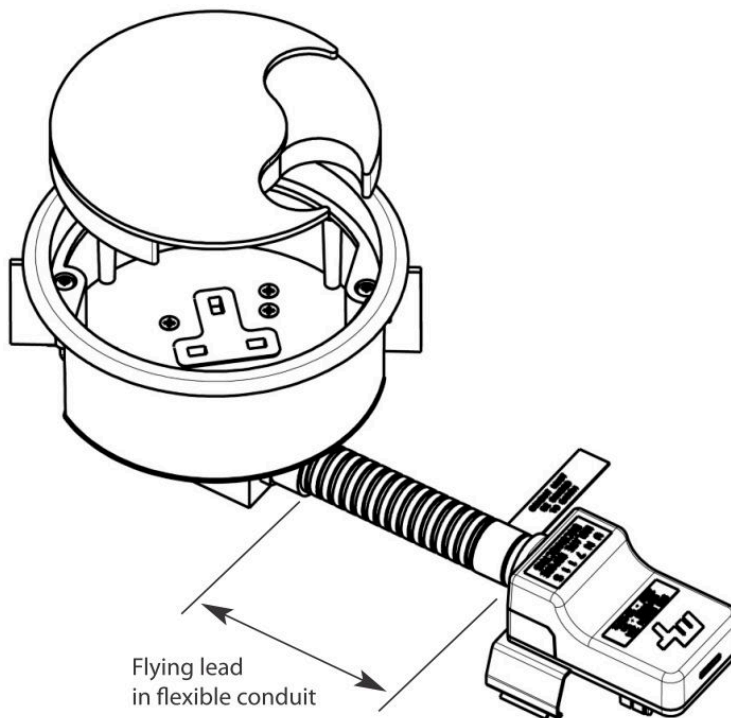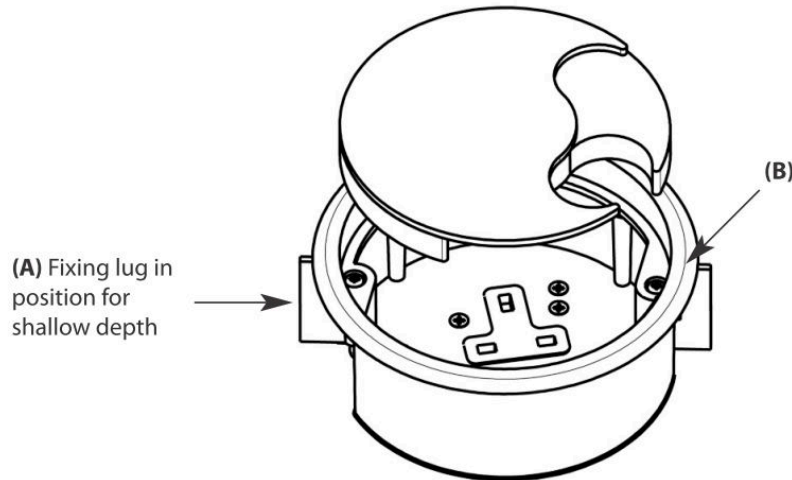

1

Cut aperture in raised floor to $\text{Ø}127\text{mm} \pm 5\text{mm}$.

2

Set fixing lugs (A) to accommodate depth of raised floor.

3

Insert grommet into floor and secure by screws (B).

4

To retain lid in position use supplied self-tapping screw.

IMPORTANT: CHECK PLUG CLEARANCE BEFORE CLOSING LID

NB: Electrical installation should be undertaken by a competent person in accordance with latest Regulations and Codes of Practice.