

MARSHALL-TUFFLEX

Dry Lining Box



UK OWNED
UK MANUFACTURER



INSTALLATION INSTRUCTIONS

PLANNING


Choose the correct box for the application and board depth.

Box Type	Fixing Centres	Internal Depth	Aperture Size	Entry	Board Thickness
Single Gang Shallow	M3.5 x 60.3mm	25mm	73 x 73mm	1 off Ø20mm 1 off 25 x 16mm	1 – 9mm
Single Gang Standard	M3.5 x 60.3mm	34mm	73 x 73mm	2 off 25 x 16mm	6 – 14mm 18 – 25mm
Single Gang Deep	M3.5 x 60.3mm	46mm	73 x 73mm	2 off Ø20mm 2 off 25 x 16mm	9 – 26mm
Twin Gang Shallow	M3.5 x 120.6mm	25mm	135 x 73mm	2 off Ø20mm	1 – 9mm
Twin Gang Standard	M3.5 x 120.6mm	34mm	135 x 73mm	2 off 25 x 16mm	6 – 14mm 18 – 25mm
Twin Gang Deep	M3.5 x 120.6mm	46mm	135 x 73mm	2 off Ø20mm 2 off 25 x 16mm	9 – 26mm
Dual	2 off M3.5 x 60.3mm	34mm	157 x 73mm	2 off Ø20mm 2 off 25 x 16mm Each module	6 – 14mm


INSTALLATION

Cut the relevant size aperture for the box in the board which should have sufficient strength to support the accessory (refer to above table).

Remove knockout and pass cables into the box.

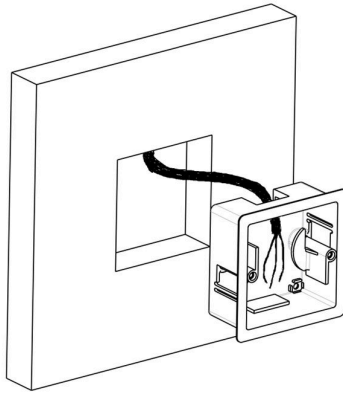

Insert the box into the aperture and swivel out the lugs using the internal fins if fitted, which will hold the box in position. Please note the wings should be a tight fit to ensure the box remains in place when accessory removed.

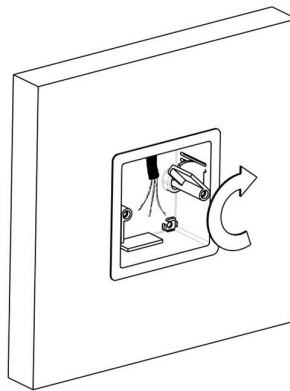

Terminate accessory and using accessory fixing screws draw in the lugs, clamping the box securely to the board.

